


» Lavatory Legs Installation

For China Basin

1. Press in threaded top plug (2) into the hexagonal leg (1).
2. Press in pointed bottom plug (3) into other end of hexagonal leg (1).
3. Thread on square nut (6) onto one end of threaded rod (4) approximately 1½" from end of rod or as required.
4. Slip on round washer (5) over end of rod (4) and thread rod into threaded top plug (2).
5. Press on rubber hat washer (7) onto other open end of threaded rod (4).
6. Slide on hex bell escutcheon (8) onto hex leg (1) with round diameter facing upward and screw (9) facing side of hex leg (8).
7. Place completed leg assembly under the china basin. Make sure that rubber hat washer (7) fits into the hole on the underside of sink. Thread up the threaded rod (4) until there is sufficient tension on the hex leg (1).
8. Thread down square nut (6) and round washer (5) to lock assembly securely in place.
9. Bring up hex bell escutcheon (8) to cover exposed rod and tighten screw (9).
10. Repeat the same steps on the second leg.

Note: When installing legs over a smooth tile floor, it is suggested that you drill a small diameter hole into the tile to permit the pointed end of the bottom plug (3) to anchor itself to the floor to prevent sliding.

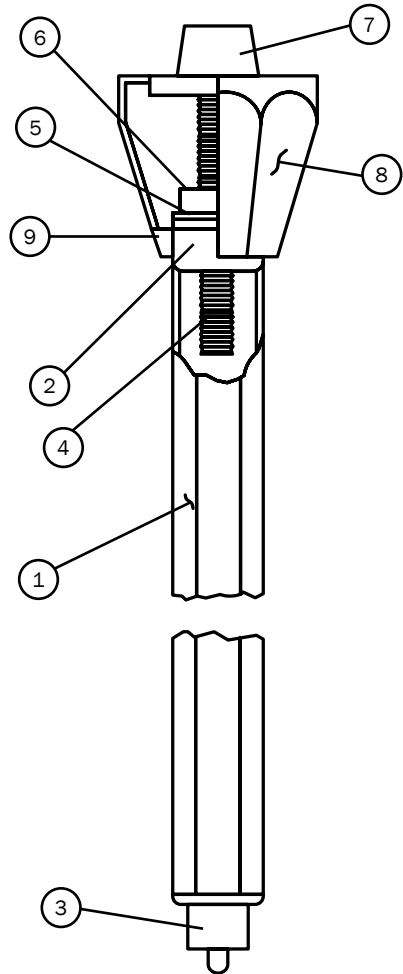

#IS-974-95650004 – 10/18